




Wiring Loom as supplied for a S2.

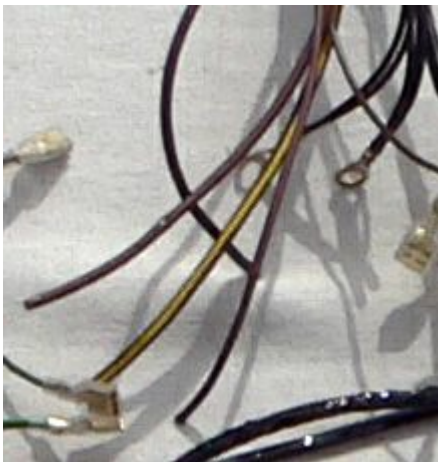

Extra terminals are supplied to finish off, mainly the regulator terminals are left off in case of fitting with screw type regulators.

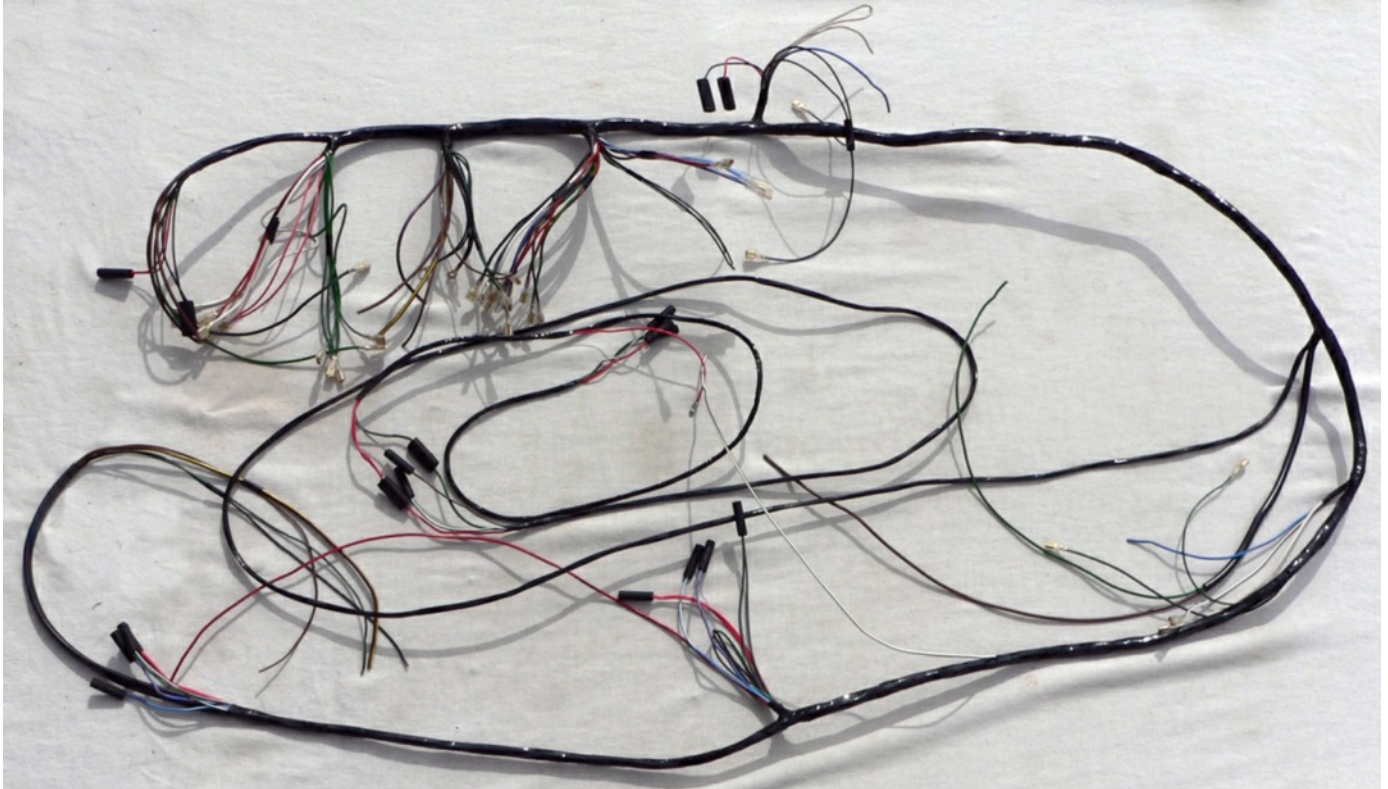

Also Dynamo and horn.

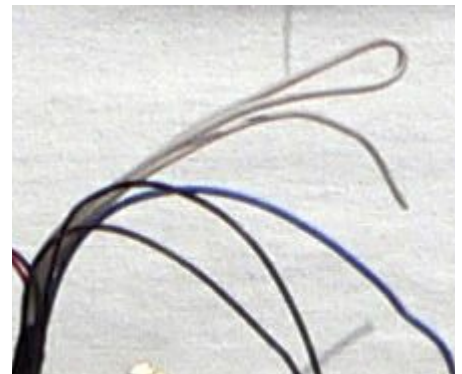

The tacho wires are uncut, dependant on type.

Custom made looms can be made to order for the S2 and S3. Extra wiring can be added to accommodate different requirements.. The loom can also be bound in a rayon cloth tape rather than the pvc tape.

- Alternators. Remember to change the tacho as this becomes negative earth.
- Pre engaged starters.
- Fog lights.
- Reverse lights.
- Hazards.
- 2 Speed wipers.
- Fuel gauge and sender.

S2 WIRING DIAGRAM

B — BLACK	P — PURPLE
U — BLUE	R — RED
N — BROWN	W — WHITE
G — GREEN	Y — YELLOW

